AKF10+ (LCD) RS485 BACnet

Duct-/Immersion temperature sensor

thermokon®
HOME OF SENSOR TECHNOLOGY

Datasheet

Subject to technical alteration
Issue date: 01.09.2022 • A121

The following illustrations show the version with LCD

»APPLICATION

Duct/Immersion sensor for measurement of air temperature and other gaseous mediums for HVAC applications (e.g. supply and exhaust ducts) with pocket Ø=6 mm. LCD models with RGB background light have a transparent cover. Can be used as an immersion temperature sensor combined with a thermowell pocket.

»TYPES AVAILABLE

Duct/Immersion sensor <u>optional with Display</u> temperature – active RS485 BACnet MS/TP
AKF10+ (LCD) RS485 BACnet <xx>.06

<xx>: mounting length 50/100/150/200/250/300/450 mm

»SECURITY ADVICE – CAUTION

The installation and assembly of electrical equipment should only be performed by authorized personnel.

The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with
- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

»PRODUCT TESTING AND CERTIFICATION

CE UKCA

Declaration of conformity
The declaration of conformity of the products are available on our website https://www.thermokon.de/ .

»NOTES ON DISPOSAL

As a component of a large-scale fixed installation, Thermokon products are intended to be used permanently as part of a building or a structure at a pre-defined and dedicated location, hence the Waste Electrical and Electronic Act (WEEE) is not applicable. However, most of the products may contain valuable materials that should be recycled and not disposed of as domestic waste. Please note the relevant regulations for local disposal.

» BUILD-UP OF SELF-HEATING BY ELECTRICAL DISSIPATIVE POWER

Sensors with electronic components always have a dissipative power, which affects the temperature measurement of the ambient air. The dissipation in active temperature sensors shows a linear increase with rising operating voltage. This dissipative power has to be considered when measuring temperature. In case of a fixed operating voltage (±0,2 V) this is normally done by adding or reducing a constant offset value.

Thermokon transducers can be operated with variable operating voltages. The transducers are set at the factory with a reference operating voltage of 24 V =.

At this voltage, the expected measuring error of the output signal will be the least. Other operating voltages, can cause a measurement deviation changing power loss of the sensor electronics.

A recalibration can be carried out directly on the unit or via a software variable (app or bus).

Remark: Occurring draught leads to a better carrying-off of dissipative power at the sensor. Thus temporally limited fluctuations might occur upon temperature measurement.

» USE ENCLOSURE WITH UV AND WEATHER RESISTANCE

After some time, outdoor mounted plastics can lose their color and quality. Therefore, all USE housings are made of special white polycarbonate (PC). The light-stable colorants and additives are used to achieve optimum protection of the polymer while maintaining color stability. The titanium dioxide used is specially developed for polycarbonate and offers excellent UV protection through the reflection of the entire light spectrum including the UV component by 340 nm. This effectively counteracts the otherwise occurring photochemical polymer degradation. The colors stay full for a long time without fading. The material is also resistant to cold and frost.

» TECHNICAL DATA

Measuring values	temperature
Output voltage	0..10 V or 0..5 V, min load 10kΩ (live-zero configuration via Thermokon USEapp)
Network technology	RS485 BACnet MS/TP, **Fail-safe Biasing required**
Power supply	15..35 V = or 19..29 V ~ SELV *With alternating voltage, the correct polarity must be ensured*
Power consumption	max. 2,3 W (24 V =) | max. 4,3 VA (24 V ~)
Output signal range temp. *Scaling analogue output*	-20..+80 °C (default setting), selectable from 8 temperature ranges -50..+50 | -20..+80 | -15..+35 | -10..+120 | 0..+50 | 0..+100 | 0..+160 | 0..+250 °C, optionally configurable via Thermokon USEapp

Operating temperature range *Max. permissible operating temperature*	**sensor pocket** -50..+160 °C	**electronic | enclosure with LCD** -20..+70 °C	**electronic | enclosure without LCD** -35..+70 °C	**mounting base** -35..+90 °C

Accuracy temperature	±0,5 K (typ. at 21 °C)
Display *optional*	LCD 29x35 mm with RGB backlight
Enclosure	enclosure USE-M, PC, pure white, cover PC, transparent, with removable cable entry, UV resistant
Protection	IP65 according to EN 60529
Cable entry	M25, for wire max. Ø=7 mm, seal insert for fourfold cable entry

Connection electrical	**Mainboard** removable plug-in terminal, max. 2,5 mm²	**Plug-in card** removable plug-in terminal, max. 1,5 mm²

|	
Pocket	stainless steel V4A, Ø=6 mm, mounting length: 50 | 100 | 150 | 200 | 250 | 300 | 450 mm
Ambient condition	max. 85% rH short term condensation
Mounting	with duct temperature of 90..120 °C mounting flange MF6DS flexible, at 120..260 °C mounting flange MF6 (brass) is recommended

When several BUS devices are supplied by one 24 V AC voltage supply, it is to be ensured that all "positive" operating voltage input terminals (+) of the field devices are connected and all "negative" operating voltage input terminals (-) (=reference potential) are connected (in-phase connection of field devices).In the case of reversed polarity at one field device, a supply voltage short-circuit would be caused by that device.

The consequential short-circuit current flowing through this field my cause damage to it. Therefore, pay attention to correct wiring.

» MOUNTING ADVICES

The sensor can be mounted on the ventilation duct by means of the mounting flange MF6DS (optional with mounting base).
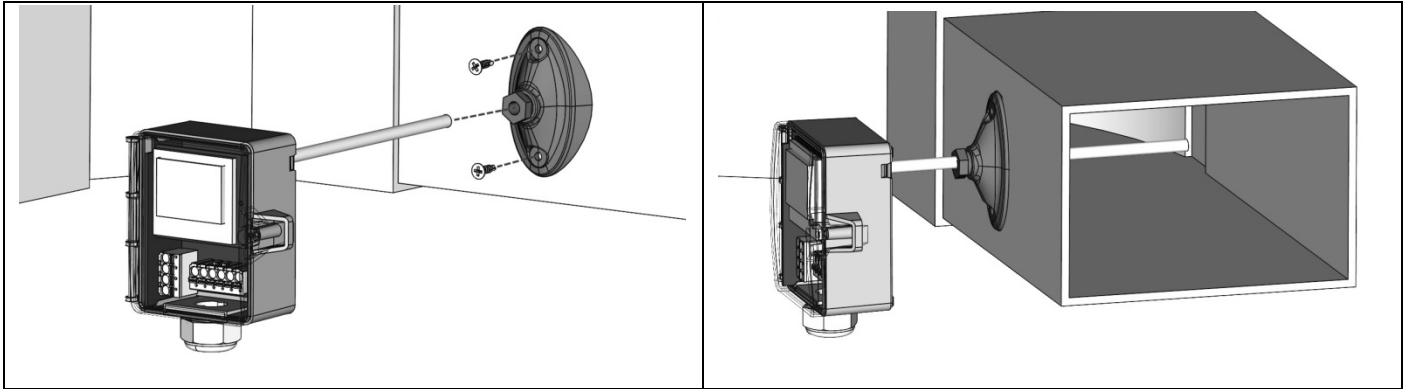
Optional mounting with mounting base (Item No. 631228), please note the installation depth of the sensorpocket. (permissible ambient temperature -35..+70 °C)
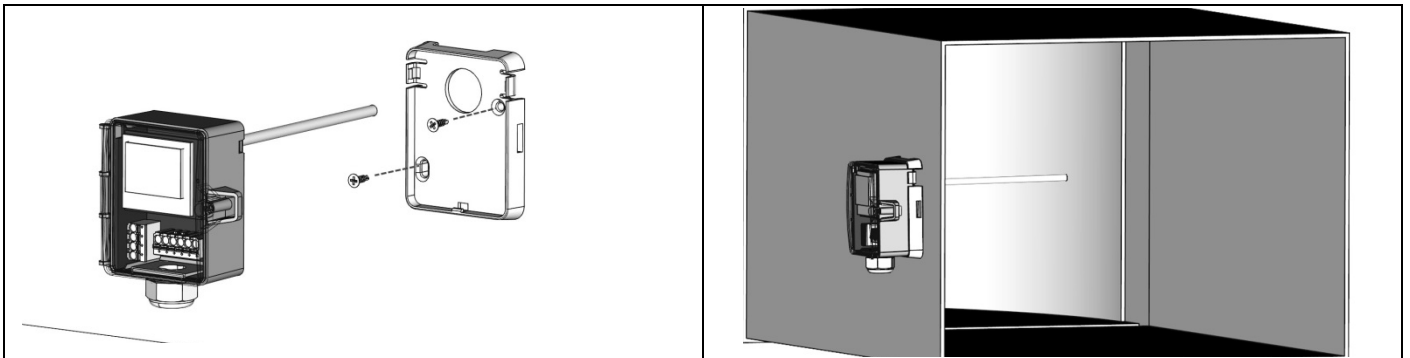
Mounting with immersion pocket or compression fitting for usage in liquid media. Use contact fluid for better heat transfer between sensor and measuring medium.
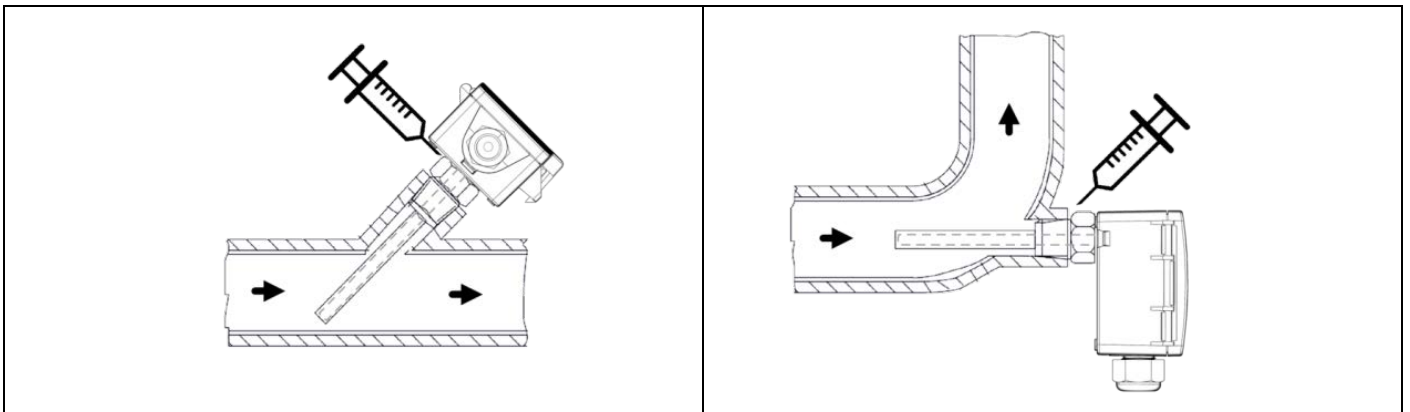
» CONFIGURATION

The Thermokon bluetooth dongle with micro-USB (Item No.: 668262) is required for communication between USEapp and USE-M / USE L products. Commercial bluetooth dongles are not compatible.

Application-specific reconfiguration of the devices can be carried out using the Thermokon USEapp. The configuration is carried out in the voltage-supplied state.

The configuration-app and the app description can be found in the Google Play Store or in the Apple App Store.
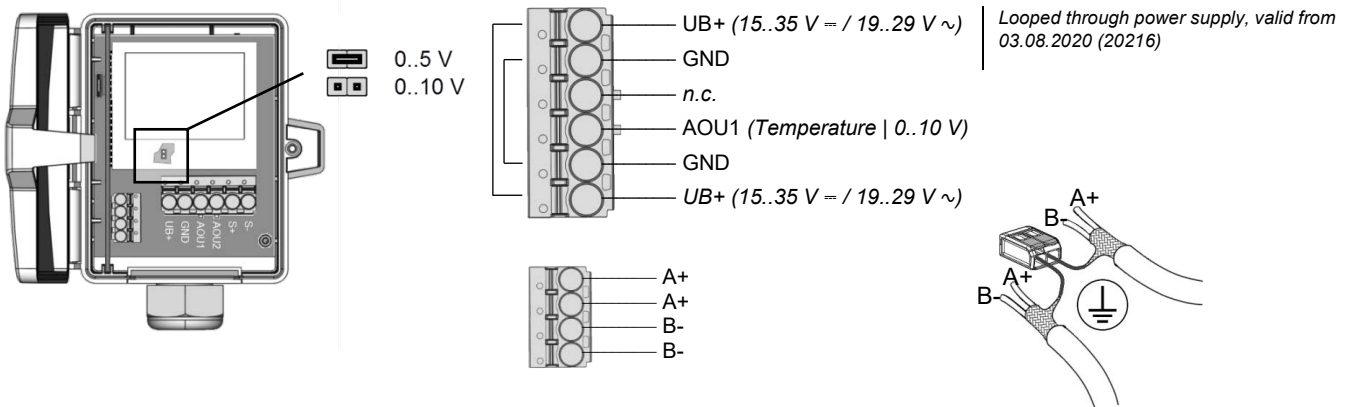
» APPLICATION NOTICE

The Bluetooth dongle snaps into the socket easily. When removing, please fix the plug-in card (option PCB) so that it is not unintentionally pulled out.

» CONNECTION PLAN

To change the output voltage range (default 0..10 V to 0..5 V) via jumper, the display must be removed from the board first. With looped-through RS485 cabling, connect both cable shields using the supplied 2-pole terminal as shown.
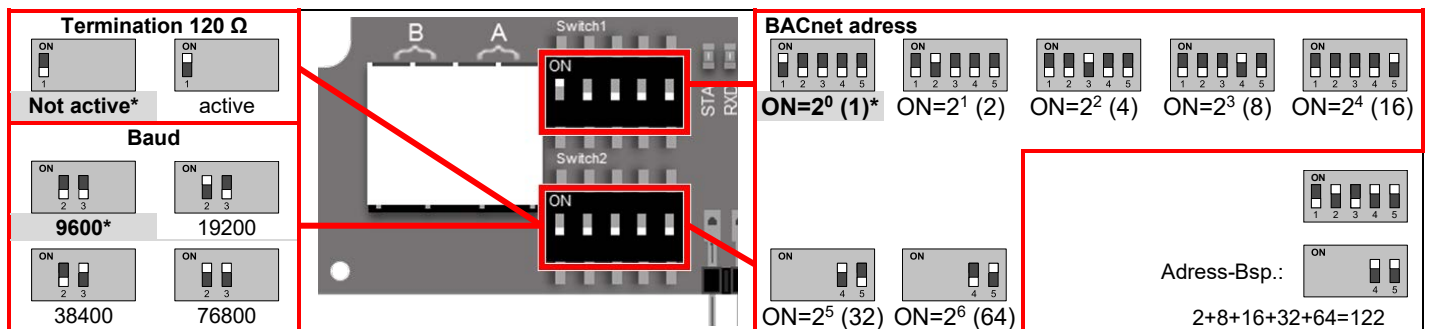
AKF10+ (LCD) RS485

0..5 V
0..10 V

UB+ *(15..35 V = / 19..29 V ∼)*
GND
n.c.
AOU1 *(Temperature | 0..10 V)*
GND
UB+ (15..35 V = / 19..29 V ∼)

Looped through power supply, valid from 03.08.2020 (20216)

A+
A+
B-
B-

A+
B-
A+
B-

» DIP SWITCHES, PLUG-IN CARD

The BACnet address of the device is set binary coded in the range of 1 ... 127 via 7 dip-switches. (the address 0 is reserved and cannot be selected).

*factory default settings

Termination 120 Ω

Not active*   active

Baud

9600*   19200

38400   76800

BACnet adress

ON=2^0 (1)*   ON=2^1 (2)   ON=2^2 (4)   ON=2^3 (8)   ON=2^4 (16)

ON=2^5 (32)   ON=2^6 (64)

Adress-Bsp.:

2+8+16+32+64=122

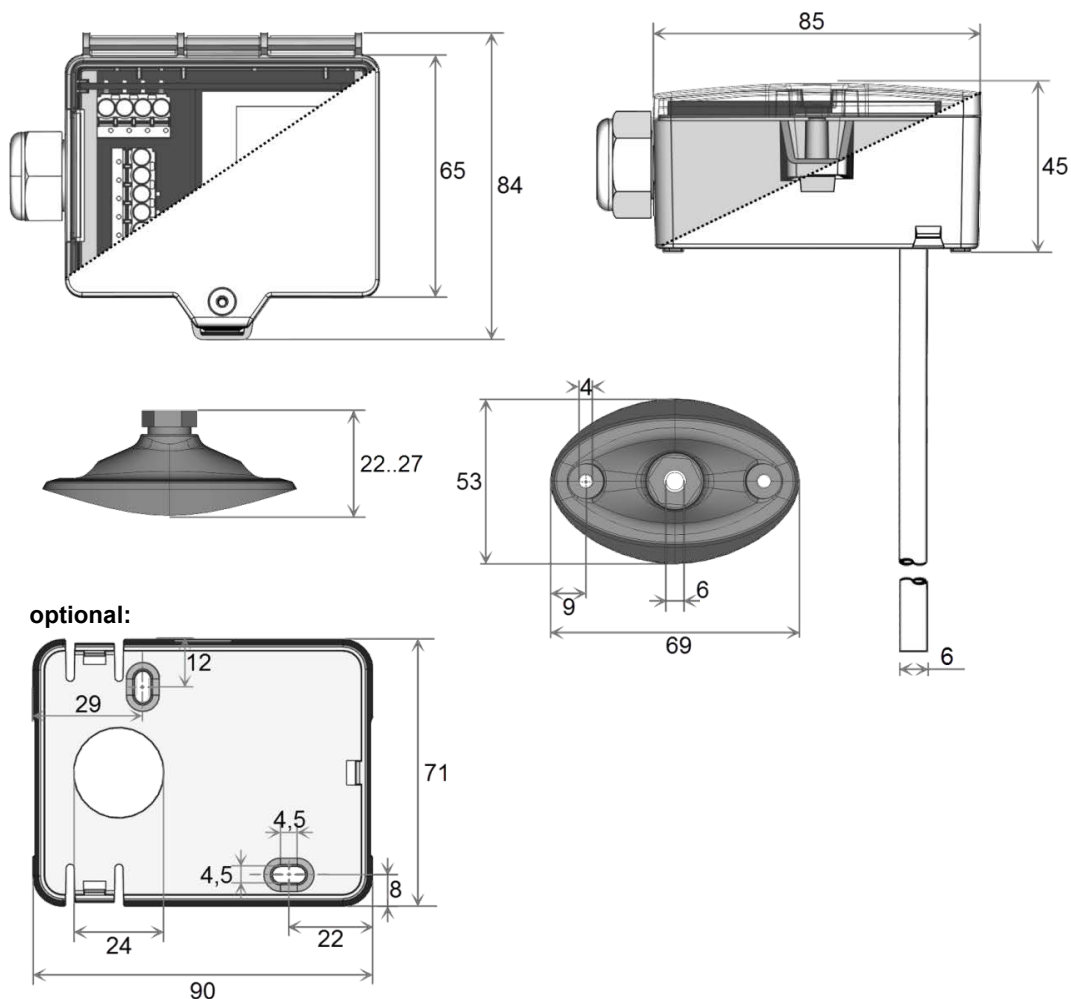| Address	Access	Description	Object AV-38 = 1 (Unit SI)		Object AV-38 = 2 (Unit Imperial)	
			COV increment / Unit		COV increment / Unit	
AI-0	R	Temperature 1	0..+250 °C	°C	0..+480 °F	°F

BACnet Objects, PICS and BIBBs:
USE-RS485 BACnet interface
A detailed description of the BACnet interface can be found at the following link: **Download**

»DIMENSIONS (MM)

optional:

»ACCESSORIES (INCLUDED IN DELIVERY)

Mounting flange MF6DS   Item No. 669016
Mounting kit universal   Item No. 698511
• Cover screw + screw cover• 2 Rawlplugs • 2 Screws (countersunk head) • 2 Screws (rounded head)

»ACCESSORIES (OPTIONAL)

RS485 Biasing Adapter   Item No. 811378
Bluetooth dongle   Item No. 668262

Mounting base   Item No. 631228
VA-Compression fitting type KL6VA   Item No. 103213
Mounting flange MF6 (brass)   Item No. 003407

Thermowell pockets stainless steel / brass for sensors with pocket Ø=6 mm

length	50 mm	100 mm	150 mm	200 mm	250 mm	300 mm	450 mm
THMSDS	610995	611008	611015	611022	611763	611039	611046
THVADS	611152	611817	611824	611848	611862	611879	611893

MS-thermowell pocket (brass, suitable up to 16 bar) type THMSDS <xx>.
VA-thermowell pocket (stainless steel, suitable up to 40 bar) type THVADS <xx>.